

UK S2 Manual

Production Specification

Name : Middle set negative LCD display

Model : UKS2

1. Production Name

Middle set negative LCD display, model UKS2

2. Supplier

Tianjin UKriver Science and Technology co.,ltd

3. SPEC

- ◇ 24V/36V/48V/60V/72V/UBE power supply
- ◇ Rated power 1W
- ◇ USB charge DC 5V 500mA
- ◇ Power off leak currant<1uA
- ◇ Controller supply work currant 100mA, peak lower than 300mA
- ◇ Operating temperature -20~70°C
- ◇ Storage temperature -30~80°C

4. Parameter and Material

ABS housing, the material for the transparent window is imported high hardness acrylic, the bracket is made of glass fiber and nylon.





5. Production Introduction


- ✧ **Speed display:** including real-time speed “RT SPEED”, “MAX SPEED”, average speed “AVG SPEED”
- ✧ **SEETING SPEED SCALE(mph/kph):** Km / mile display can be set according to customer habits
- ✧ **Intelligent battery indicator:** Provide stable battery reminder through optimization algorithm, power is not affected by motor start-stop fluctuations, if the system supports battery communication, it can display accurate percentage power
- ✧ **5 levels of backlight brightness:** Set the brightness of the backlight according to customer usage habits. Level 1 is the darkest and Level 5 is the brightest
- ✧ **At most 9 gears:** Number of gears can be set according to user needs, like 3/5/9/6
- ✧ **Mileage display:** Can display accumulated mileage “ODO”, single mileage “Trip”, riding time “Time”
- ✧ **Output power indication:** Real-time display of output power (battery output power)
- ✧ **Fault Reason Display:** provide description for fault code
- ✧ **Walk assist function:** support 6km walk assist
- ✧ **Speed measuring magnets number adjustment:** numbers can be set according to the actual requirements of customers
- ✧ **PAS magnets number adjustment:** numbers can be set according to the actual requirements of customers
- ✧ **Endurance mileage indication (requires battery to support communication)**


- ✧ **Battery information display (requires battery to support communication)**
- ✧ **USB charging port, can provide rated charging for mobile devices, current: 500mA / 5V**
- ✧ **Program upgrade:** can be upgraded through serial port. For details, please refer to description documentation
- ✧ **Parameter setting:** parameters can be set by button, including gear, wheel diameter, voltage binning, limit speed, current limit, etc., please refer to the description of parameter setting




6. LCD Display Instructions

LCD full display

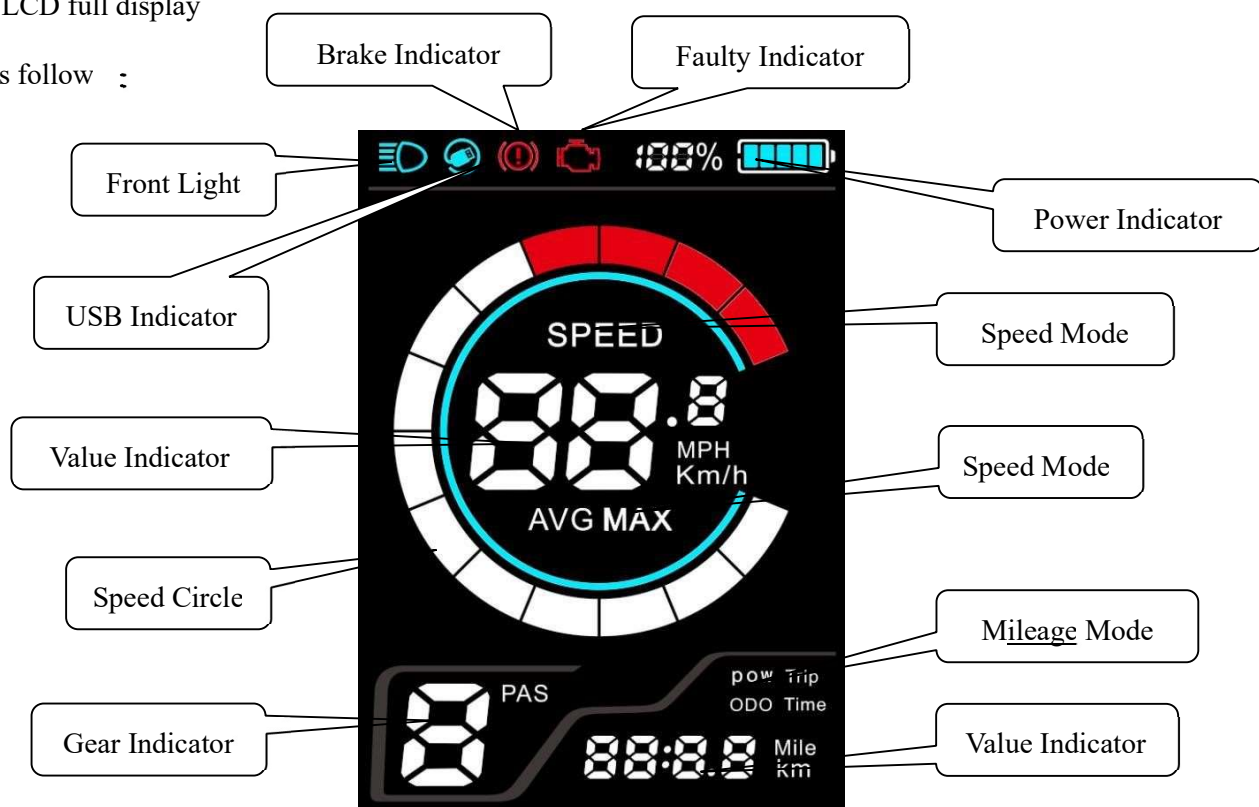as follow :



- ✧ **Speed mode:** average speed (AVG SPEED), maximum speed (MAX SPEED), real-time speed (RT SPEED)
- ✧ **Speed display:** display speed value, Km / h kilometers per hour, MPH miles per hour
- ✧ **Power Indicator:** Provide stable battery reminder through optimization algorithm, power is not affected by motor start-stop fluctuations, if the system supports battery communication, it can display accurate percentage power
- ✧ **Headlight indication:** display  when the headlights are on

- ✧ **Brake Indicator:** display  when brake power off.
- ✧ **Gear indicator:** Display the current power-assisted gears 0-9, where 0 is neutral and no power, and 1-9 corresponds to power-assisted gears. Display P when in walk assist mode. ✧
Faulty Indicator : Display  when a fault is detected.
- ✧ **Mileage mode:** Divided into single mileage “TRIP”, accumulated mileage “ODO”, riding time “TIME”.
- ✧ **Mileage display:** Display mileage information or time information according to the set mode.
- ✧ **USB display:** the interface displays  when the USB charging function is turned on.

7. Function Description

Button description as follow:



7.1 Power On/Off

Long press(1 second) **Power Button** when the display is off, display, the display is fully displayed and starts to work, the **Power Button** power of the controller is turned on; **Power Button** Long press(1 second) when the display is on, display power off, the power of the **Power Button** controller is turned off. If you ride for 5 minutes (time can be set by the user) without operating the meter, the meter will automatically turn off the power.


7.2 PAS Gear Choose

In the manual shift mode, short press **Plus Button** or **Minus Button** to switch the assist position, change the assist ratio, the lowest 1st, the **Plus Button** **Minus Button** highest 9th, the default is 1st when the meter is turned on, and 0 is the neutral assist.





7.3 Mileage Mode Switch

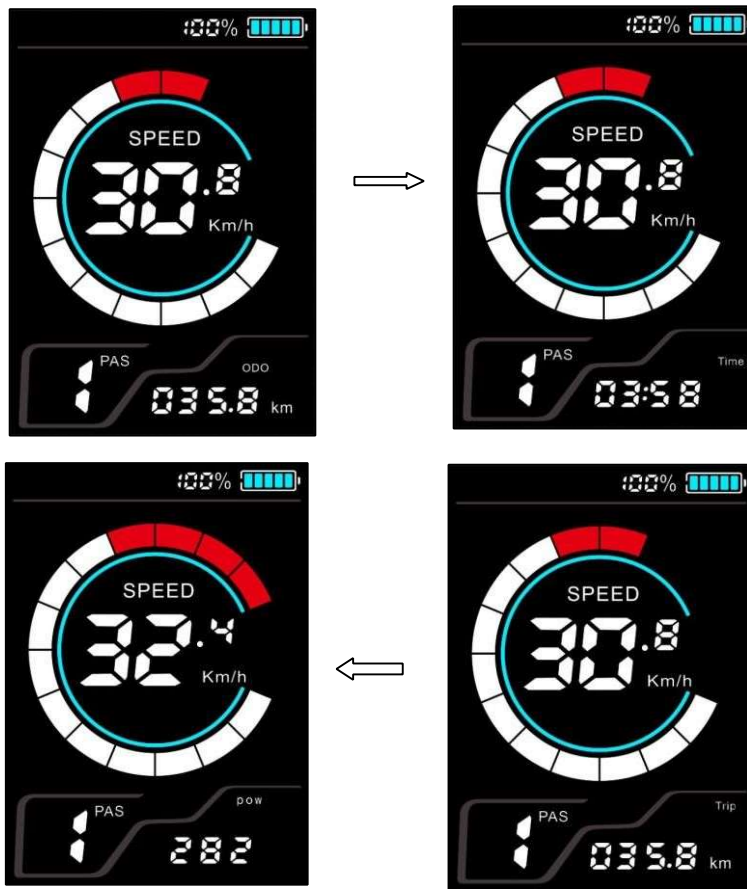
When power on, short-press **Power Button** to switch the mileage display mode, and the following information is displayed cyclically: riding time (Time) → accumulated mileage (ODO) → power information (Pow) → single mileage (Trip).



*If there is no key operation for 5 seconds, the meter will automatically return to the single mileage display state.

7.4 Speed Mode Switch

When power on, short press the **Mode**  to switch the speed display mode, and the following information is displayed cyclically: **Button**  real time speed (RT SPEED) → average speed (AVG SPEED) → maximum speed (MAX SPEED).

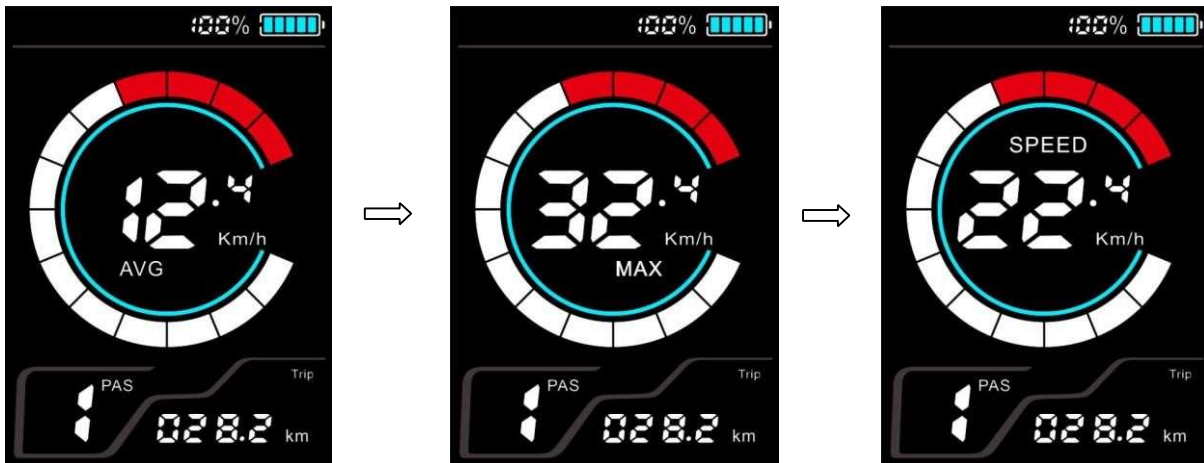





Average Speed (AVG)


Max Speed (MAX)

Real time speed(SPEED)

*If there is no key operation for 5 seconds, the meter will automatically return to the real-time speed display state.

7.5 Headlight / Backlight Switch

Press and hold **Plus**  (1 second), the brightness of the meter's backlight decreases, and the lights are turned on **Button**  (requires controller support). **Plus**  Press and hold again (1 second), the display backlight will return to its original **Button**  brightness, and the lights will be turned off at the same time.

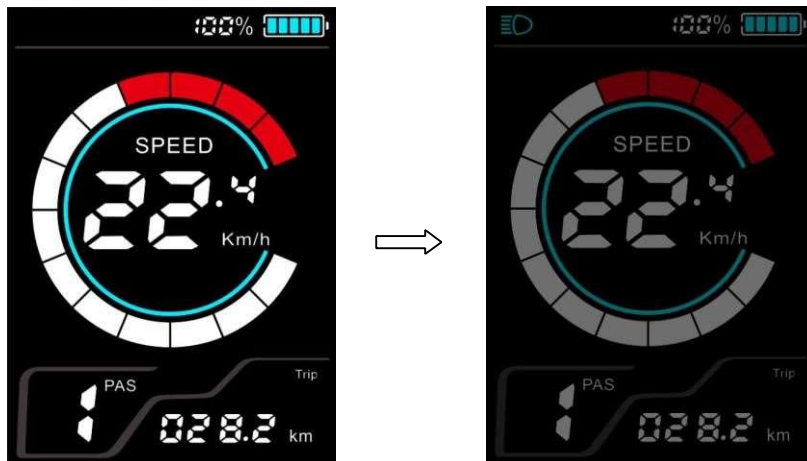

Headlight off

Headlight on

* Meter backlight brightness can be adjusted in 5 levels. Users can set it according to their needs.

7.6 Walking Mode(6km walk assist)

Press and hold **Minus Button** (1 second), the electric bike enters the boosting state, the speed displays the real-time speed, and the gear position **Minus Button** displays "P". Release to exit the walking mode.



Walking Mode Off

Walking Mode On

*Some controllers may not support this function

7.7 USB Function

Long press **Mode Button** (1 second), the USB function is turned on, the user can use the USB function, and **Mode Button** long press for more than 1 second, the display will close the USB function, and the charging parameter is DC 5V 500mA.



USB ON

USB OFF

7.8 Clear Data

Press **Plus** and **Minus** simultaneously for 1 second to clear the temporary data. The cleared **Button** data includes the maximum speed (MAX SPEED), average speed (AVG SPEED), single mileage (TRIP), and riding time (TIME).

*The above data will not be cleared when the display is turned off or the electric bike is turned off.


8. MENU Parameter Setting

When power on, press **Mode** twice (<0.3 seconds between presses), the system enters the parameter setting state. **Button** In this state, the meter parameters **Mode** can be set. Press twice again to exit the setting state. (<0.3 seconds between presses). **Button**


When in setting state, press **Mode** to select the desired adjustment item, when the parameter flashes, press to **Button** **Plus** and **Minus** adjust the parameter setting, press **Button** **Button** to save and switch, and press **Mode** twice to exit the setting state (<0.3 seconds between presses). **Button**

*In the parameter setting state, if no key operation is performed for 30 seconds, the meter automatically exits the setting state. In the riding state (the speed indication is not 0), you cannot enter the setting interface. If you start cycling in the setting interface (the speed indicator is not 0), you will automatically exit the setting.

8.1 The display setting items are as follows :

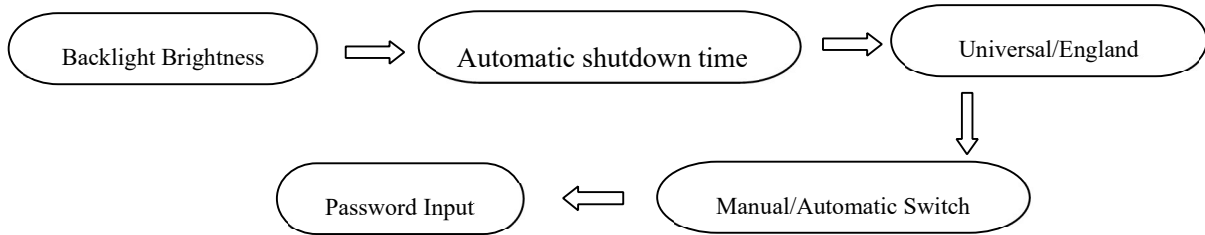


- ✧ **Backlight Brightness:** For item P1, press **Plus Button** and **Minus Button** to select the display 1 ~ 5, “1” is the darkest backlight and “5” is the brightest.

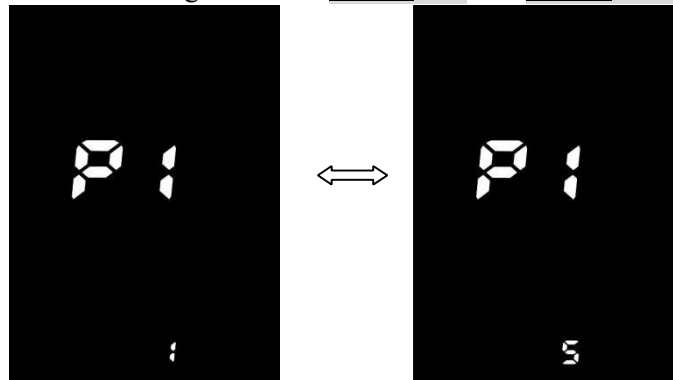


Backlight Brightness Adjust Interface

- ✧ **Automatic shutdown time:** for item P2, press **Plus Button** and **Minus Button** to adjust the position, 1 ~ 9 minutes represents the automatic shutdown time, OFF means cancel the automatic shutdown function.

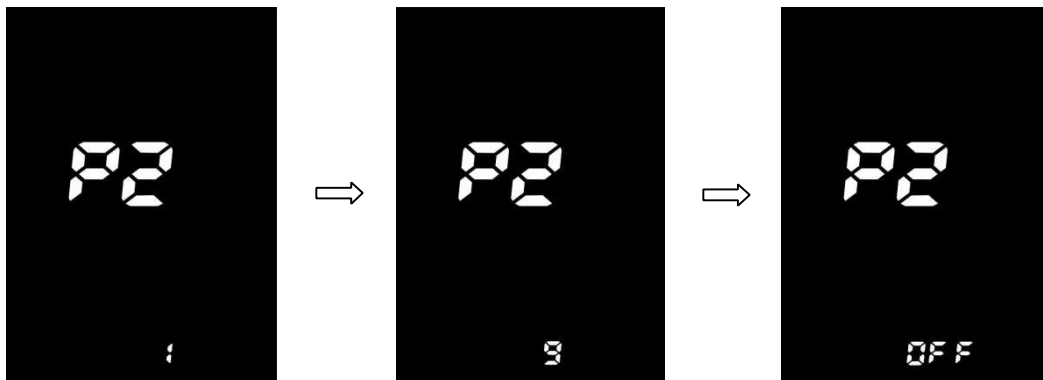


Automatic Shutdown time Adjust Interface

- ✧ **Universal/ England:** for item P3, press **Plus Button** and **Minus Button** to switch km / h or MPH display, set Universal/ England: 0 stands for universal system and 1 stands for England system.

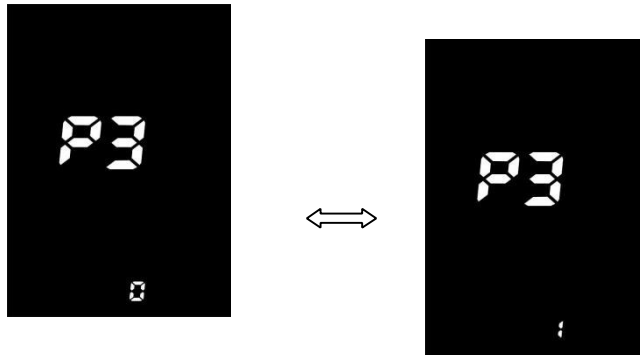


Universal/ England Switch Interface

- ✧ **Manual / Automatic Switching:** for P4 item, press **Plus Button** and **Minus Button** to select manual / automatic switching. 0 means manual gear, 1 means automatic gear.

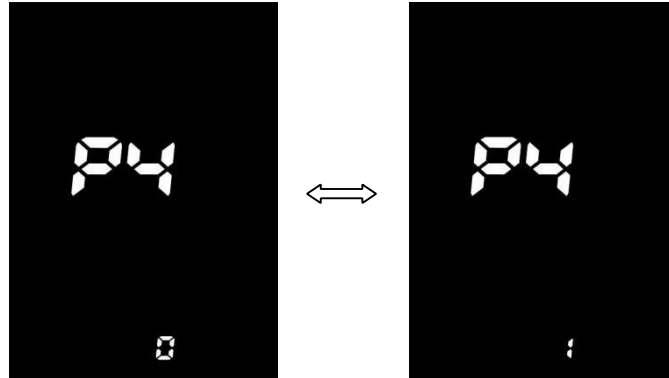


Manual / Automatic Switch Interface

- ✧ **Password input:** enter ADS advanced setting items, the speed position of the display shows “ADS”, indicating that entering the password can enter advanced setting items. Short press **Mode Button** to enter the password input state, the speed position of the display will show “PSD” at the same time, prompt for the password, press **Plus Button** and **Minus Button** to set the password value (0 ~ 9), press **Mode Button** to switch the password item, the password is 4 digits, and the default password "1801", press **Mode Button** to confirm the entry after the password adjustment is completed. If the password is wrong, “Err” will be displayed, and the display will automatically return to the real-time speed /single mileage display state. If the password is correct, enter the advanced settings sub-item.

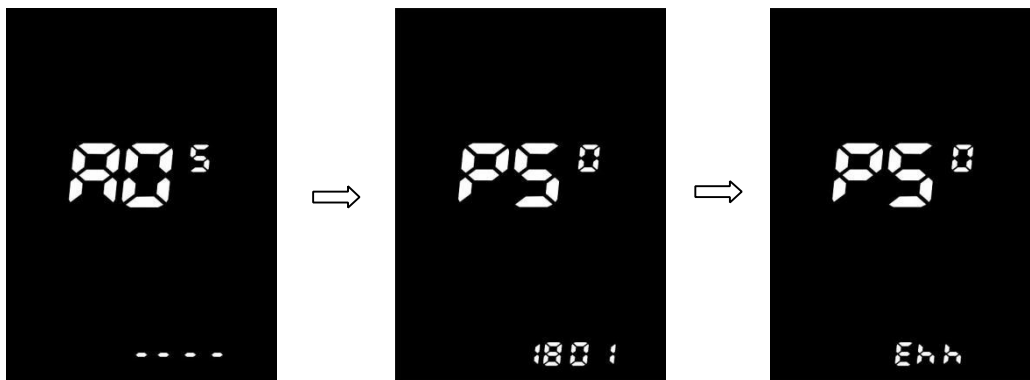


Password Input Surface

8.2 The advanced setting items are as follows :

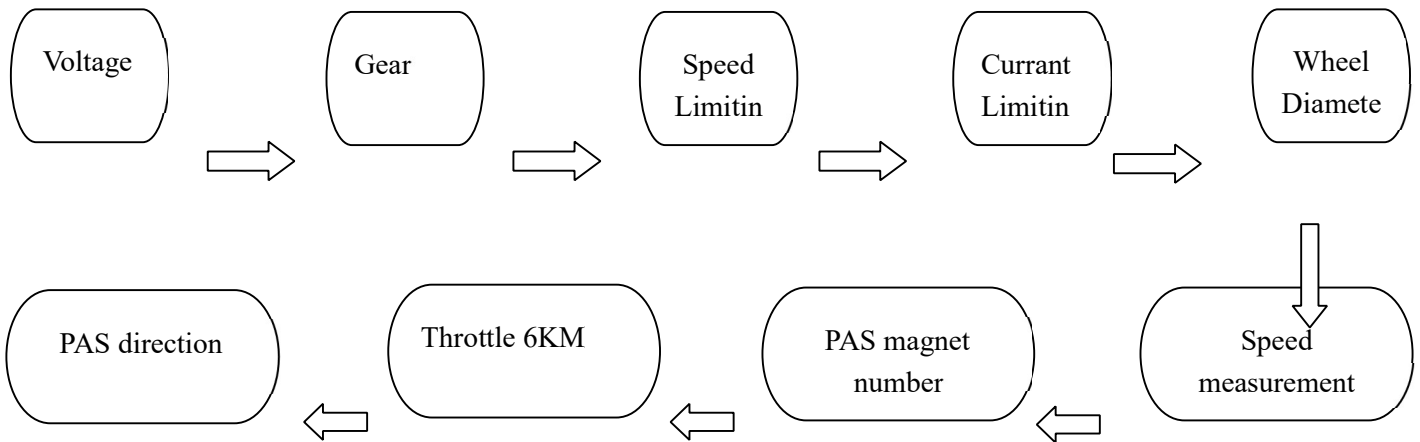


- ✧ **Voltage Choices** : A1item, Press **Plus Button** and **Minus Button** to switch between 24V / 36V / 48V / 60V / 72V / UBE. UBE stands for user-defined voltage (the voltage value can be set by a computer program. For details, please refer to the computer parameter setting instruction file).

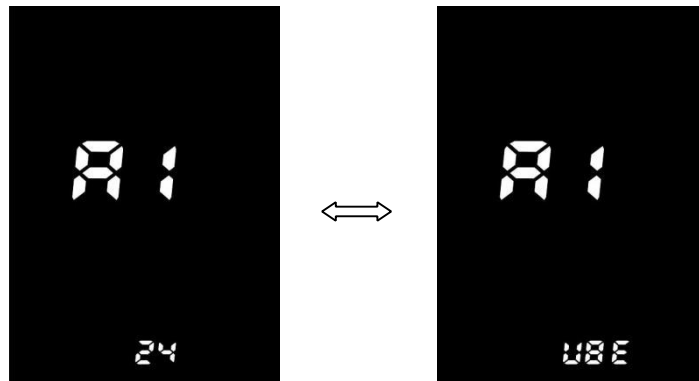


Voltage Choices Interface

- ✧ **Assistance gear selection:** item A2, **Plus Button** and **Minus Button** to set the gear range 3/5/9/6. 1 means 3-speed system; 2 means 5-speed system; 3 means 6-speed system; 4 means 9-speed system.

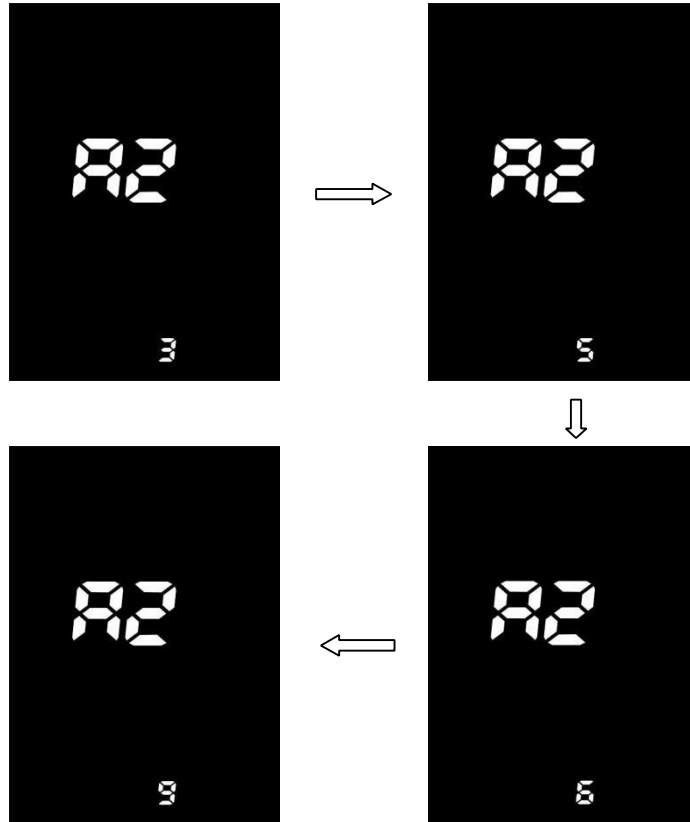


Assistance gear selection Interface

- Speed Limiting Adjustment:** item A3, Press **Plus Button** and **Minus Button** to adjust the speed limit value. The default is 25km / h. Users can set the speed limit value according to their needs. After **Power Button** the adjustment is completed, press to confirm and exit.

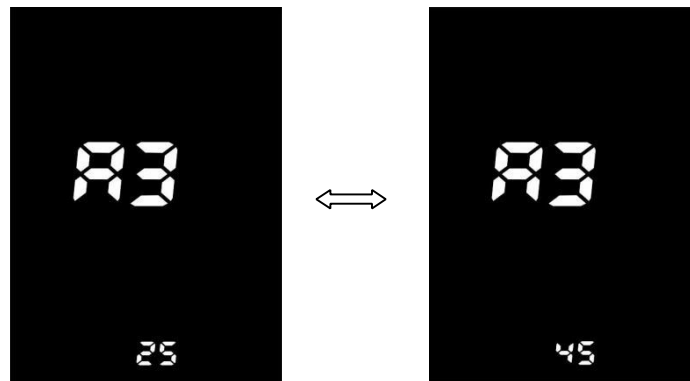

Speed Limiting Adjustment Interface


- Current Limiting Adjustment:** item A4, Press **Plus Button** and **Minus Button** to adjust the current limit value. The default is 15A. Users can set the current limit value according to their needs. After the adjustment is completed, press **Power Button** to confirm and exit.

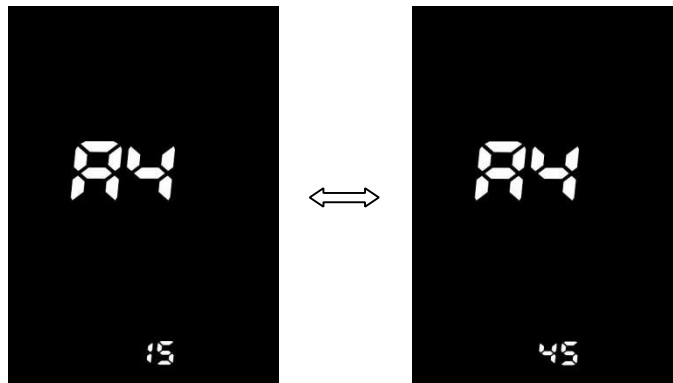

Current Limiting Adjusting Interface


*Speed and current are restricted by the motor and controller at the same time and may not be able to reach the set value.

- ✧ **Wheel Diameter Selection:** item A5, press **Plus Button** and **Minus Button** to switch the display 16/18/20/22/24/26/27 / 700C / 28/29/30/31/32, select the corresponding wheel diameter, the unit is inch. Incorrect selection of wheel diameter will cause abnormal speed.

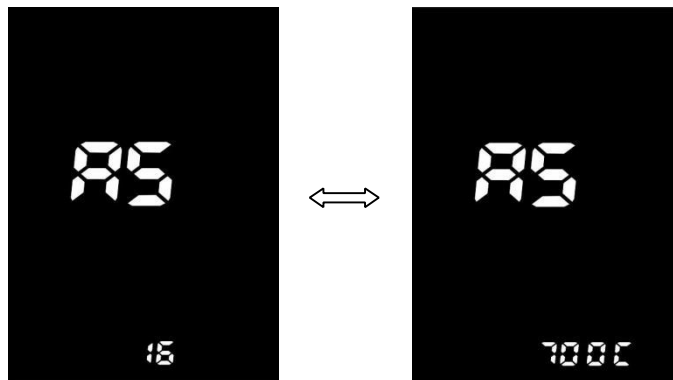


Wheel Diameter Selection Interface

- ✧ **Number of speed measuring magnets:** item A6, press to **Plus Button** and **Minus Button** adjust the number of speed measuring magnets 1 ~ 72. **Power Button** The user can set the number of speed measuring magnets according to the requirements. After the **Power Button** adjustment is completed, press to confirm and exit.

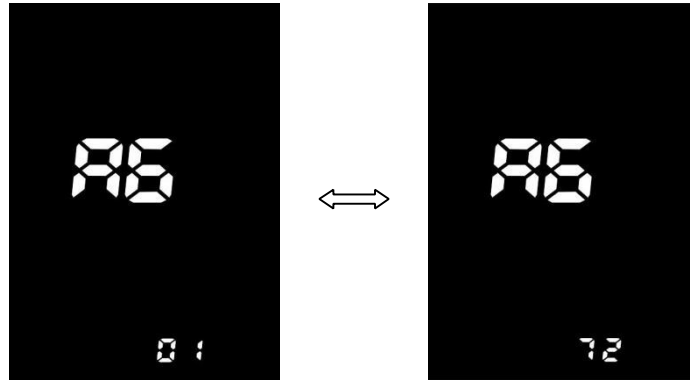


Number of speed measuring magnets Selection Interface

- ✧ **Number of PAS magnets:** item A7, press the **Plus Button** and **Minus Button** boost the number of booster magnets 3 ~ 15. The user **Power Button** can set the number of PAS magnets according to the needs. After the adjustment is completed, press **Power Button** to confirm and exit.

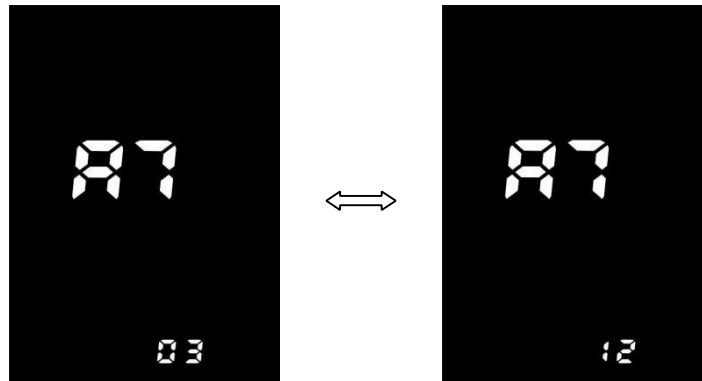


Number of PAS magnets Selection Interface

- ✧ **Throttle 6KM:** item A8 项, press **Plus Button** and **Minus Button** to select the 6km function switch.

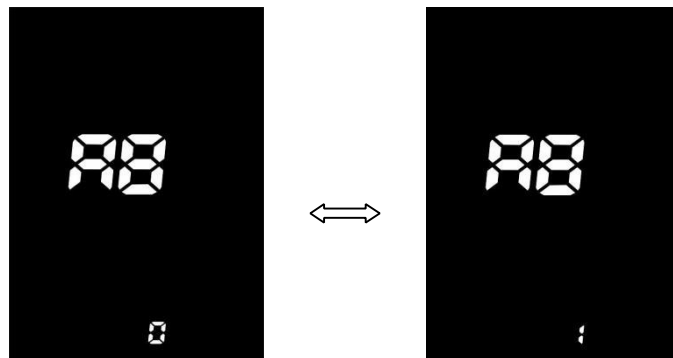


Throttle 6KM Adjust Interface

- ✧ **PAS orientation:** item A9, **Plus Button** and **Minus Button** press to select the direction of the power sensor.

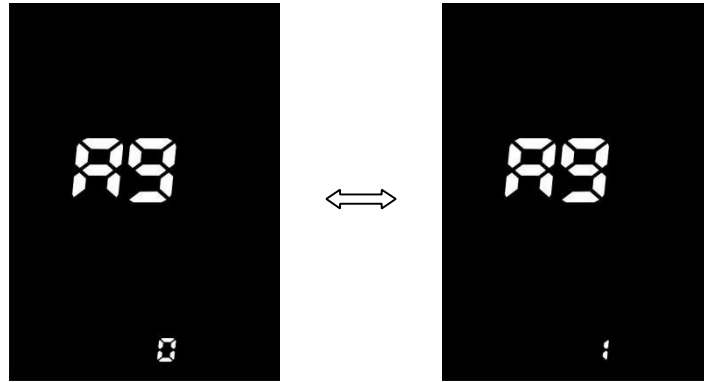


PAS orientation Adjustment Interface

- ✧ **Driving Model:** item A10, press **Plus Button** and **Minus Button** to select the driving model. 0, Manpower Riding. 1, Pure Assist Riding. 2, Pedal Electric Riding.

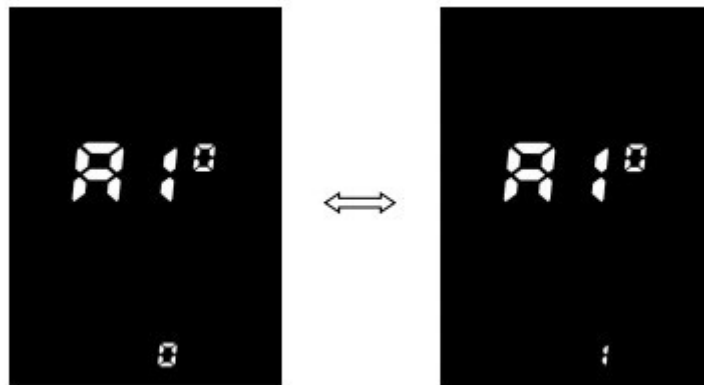


Driving models adjustment interface

- ✧ **Handlebar Speed adjustment:** item A11, **Plus Button** and **Minus Button** press to select the PWM duty cycle of the handlebar, the value can be adjusted from 0 to 1000.

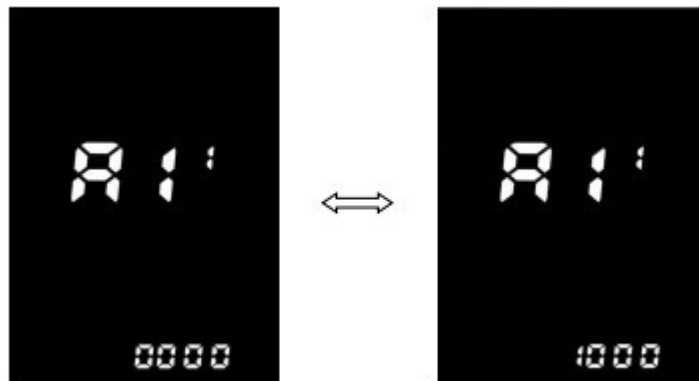


Handlebar Speed adjustment interface

- ✧ **Booster Start Strength:** item A12, **Plus Button** and **Minus Button** press to select the boost start intensity. 0 is the weakest, 5 is the strongest.

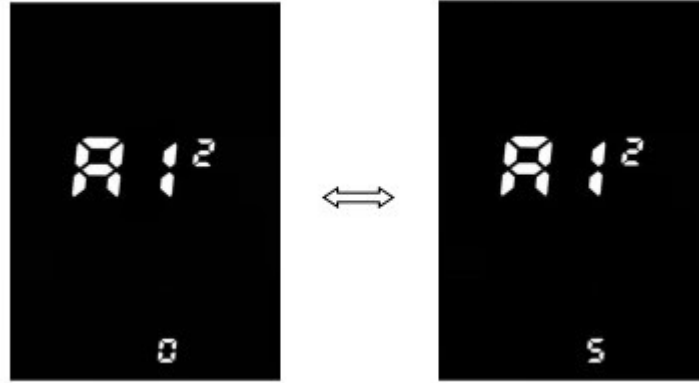

Booster start strength adjustment interface

9. Error Code Definition

UKS1 can provide error indications for vehicle faults. When a fault is detected, the LCD screen displays , and the error code “n” and error description are displayed at the speed display position. Please refer to the error code comparison table to determine the corresponding fault.

fault code (decimal)	fault state	Check the location
08H	battery undervoltage	charge the battery
40H	Motor failure	Motor Hall fault, check whether the Hall wire is short, and whether the plug is plugged in properly. If all is good replace the motor.
20H	Handlebar failure	Check the line and plug of the handlebar, if all are good, replace the handlebar.

01H	Motor failure	Motor Hall fault, check whether the Hall wire is short, and whether the plug is plugged in properly. If all is good replace the motor.
02H	Brake	Check the brake lever for short circuit, no return or damage
10H	Controller failure	The controller is damaged Replace the controller.
30H	Communication reception failure	<p>examine</p> <p>1. Is there any disconnection in the instrument line? 2. Whether the connection between the controller and the instrument plug is in good condition.</p> <p>3. Unplug the booster sensor to see if it reports. If it does not report, the sensor is short-circuited and damaged, and the sensor needs to be replaced.</p>


		<p>4. Unplug the switch to see if it is reported. If it is not reported, the handlebar is short-circuited and damaged, and the handlebar needs to be replaced.</p> <p>5. Unplug the motor Hall wire and see if it reports. If it is not reported, the motor Hall is short-circuited and damaged, and the motor needs to be replaced.</p> <p>6. None of the above can solve the problem, use the replacement method to troubleshoot the fault, and replace the controller or instrument to troubleshoot which problem is.</p>
<p>If has 2 or more error it will plus. Like Error 20H and Error 40H Will show Error 60H</p>		



Error Warning Interface

10. Installation Instruction

10.1 Please refer to the following figure for the instrument screw assembly. Pay attention to the screw tightening torque. Instrument damage caused by excessive torque is not covered by the warranty.

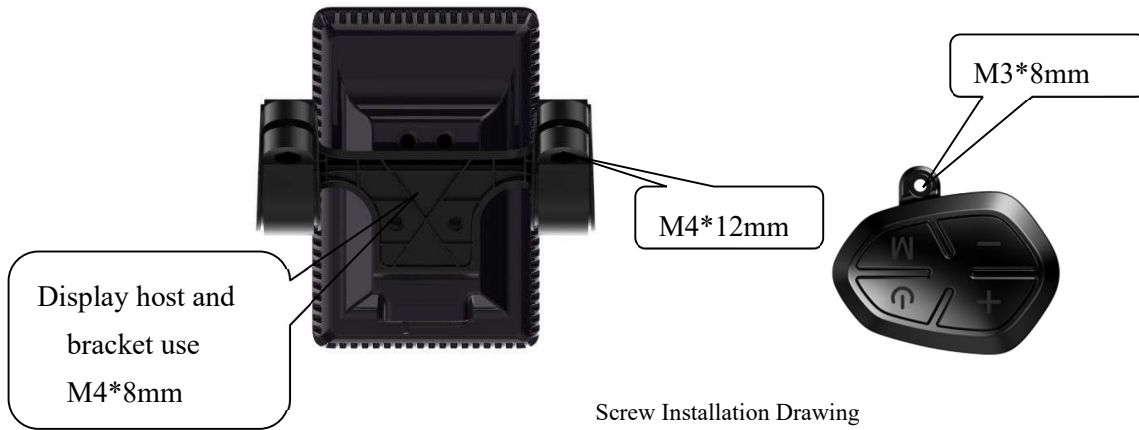


10.2 Clips are suitable for three handlebar sizes, 31.8mm, 25.4mm, and 22.2mm. Customers can choose according to actual needs.

And 25.4mm and 22.2mm need to be matched with corresponding conversion.



11. Cable Outlet Definition

The color of the five-core waterproof line is <red, blue, black, green, and yellow>. The order is defined as follows:

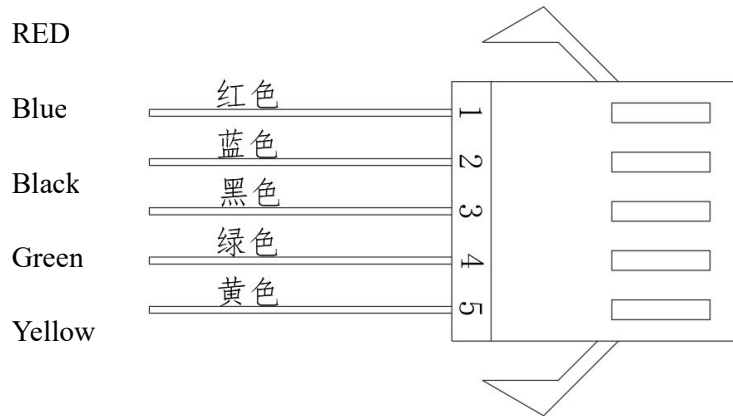

- 1、 RED : Power+ (Battery power 24V/36V/48V)
- 2、 Blue : Controller lock cable
- 3、 Black : GND
- 4、 Green : RXD display input signal, display receives signal from controller
- 5、 Yellow : TXD display output signal, display sends signal to controller